

Moon Bounce / Inflatables

SET UP INSTRUCTIONS:

1. Locate and mark underground Public Utilities (gas, electric, cable, phone, etc). Customer is responsible for locating & marking Private Utilities. Be sure to look around area for obstacles, such as pipes, wires, landscaping, underground sprinkler system, sprinkler heads, underground gas or power lines for grills, sheds, lighting, etc. A 5' clearance is required away from overhead power lines (electrical) because power can jump.
2. Lay out tarp on ground, lay unit, centered on top and un-roll.
3. Pound in a stake through the grommet on each corner of inflatable.
4. There is a 6' neck in the rear. Attach neck to blower using rope or strap. Some units have 2 necks (only one is used) tie off any unused neck if applicable. Some units have base zippers that MUST BE zipped closed.
5. Connect blower to 115-volt (20 amp) electrical outlet. Be sure nothing else uses the outlet. If using an extension cord use a 10 or 12 gauge cord only.
6. The Inflatable will inflate within minutes. The blower must run continuously when Inflatable is in use. Be certain base zippers are zipped & short air release stub is tied closed during operation.

GUIDELINES FOR OPERATION:

- Take shoes off & remove sharp objects from pockets. Silly string, gum, candy, toys, confetti, etc. are NOT ALLOWED inside Inflatable (YOU WILL BE CHARGED FOR REMOVAL). Do not attach anything (tape, balloons, streamers, etc) to Inflatable (use of these items are not covered if you accepted Rental Protection).

SAFETY PRECAUTIONS:

- Safety and freedom from damage depends on operator. Having control over exuberant showoffs is extremely important. The Inflatable is a top quality, well-engineered product designed to provide fun; use it wisely.
- Adult supervision is required to ensure the safety of users. Deflate and Do NOT use in winds over 15 mph.

SUGGESTED CAPACITY:

- Please DO NOT allow more than suggested number of people inside inflatable. The seams may break open if capacity is overloaded.
- If any seams are loose, popped or any other signs of misuse are found a repair fee will be charged and is not covered by Rental Protection.

Approximate # of Children Under 7	Approximate # of Teens / Adults	Maximum Weight Limit
-----------------------------------	---------------------------------	----------------------

6	3-5	750 lbs
---	-----	---------

WATER:

- Water may cause injuries or electrocution while Inflatable is running. If it's raining, turn off and allow Inflatable to deflate as a safety precaution and store blower out of rain.
- If Inflatable gets wet, blow it up & let dry out before rolling up.

TO DEFLATE:

- Make sure everyone is out of inflatable before shutting off blower, unplug blower from electrical outlet.
- Disconnect blower and open air release stub to deflate.

ROLL UP:

- Make 4' folds and roll tightly and slowly getting all air out of Inflatable.

DISCLAIMER:

- Jefferson Rentals and the Manufacturer REQUIRE that you stake down your Inflatable and follow all instructions. If you do not stake Inflatable, neither Jefferson Rentals nor the Manufacturer will be liable.